


GAGEWOVEN®

ARCHITECTURAL WIRE MESH

Installation With Backer and J-Trim

- Drill holes through MDF backer and decorative face (if any) at a slight angle.
- Use fine stainless steel wire to secure the mesh to the backer (and decorative face).
- Secure wires to the back of the MDF backer or to the decorative face (if stainless steel or thicker material).
- Bottom right image shows countersunk hole with self-made 2-hole washer to support MDF.
- Depending on size of panel, mesh may need to be secured multiple areas. Recommended securing at every two (2) feet to ensure the center panel does not droop or sag.

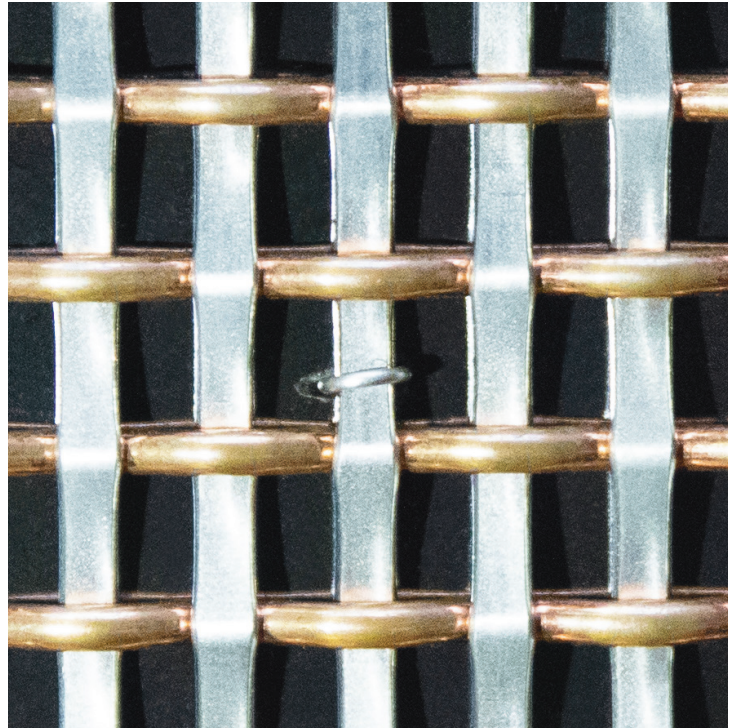

Images are enlarged to show detail.

